4052_SKY+ LEAFLET 3/8/06 3:12 pm Page 1

D USING THE KEYS

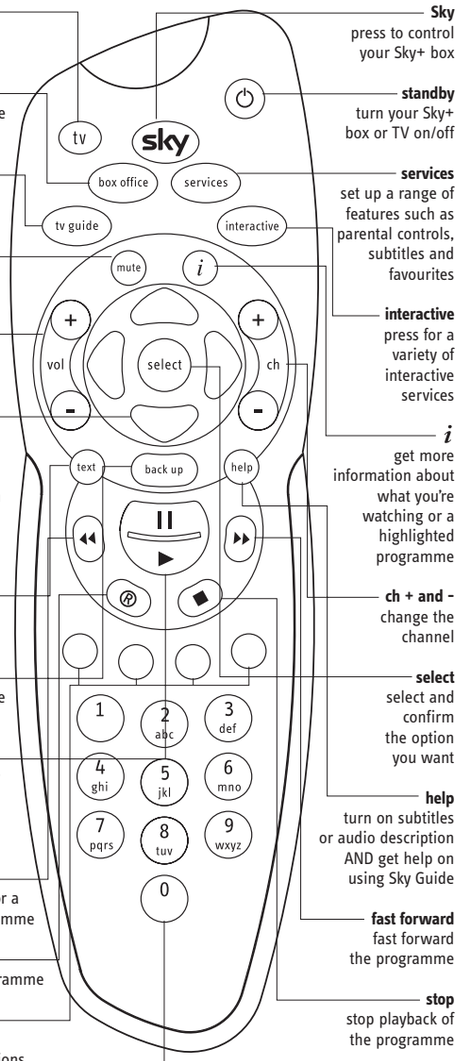

E IMPORTANT NOTES ON THE BATTERIES

When the batteries are low, Sky Guide shows you a message onscreen. Replace the batteries as soon as you see the message.

- If you leave your remote control without batteries for longer than 10 minutes, the TV compatibility settings are lost. After replacing the batteries you can control your Sky+ box as usual but you have to set it up to work with your TV, as described in this leaflet
- Don't leave flat batteries in your remote control
- Always replace both batteries at the same time; don't mix old and new batteries or mix different battery types
- When you throw away old batteries, make sure they go to an environmentally friendly collection point.

F MAKE YOUR REMOTE CONTROL LAST LONGER

- Don't drop it
- Don't let it come into contact with any liquids
- Use a dry cloth to clean it.

G IF YOU HAVE ANY PROBLEMS PLEASE REFER TO:

- your Sky+ box user guide;
- the Sky Accessory pages of sky.com;
- access help pages by pressing *Interactive* > *Sky Customer Service* > *Equipment help* on your remote control.

Otherwise call our technical helpline; Access details by pressing *Services* > *Telephone Numbers* > and locate Technical Help (Sky).

703686

© Copyright British Sky Broadcasting Limited 2006. All rights reserved.
Sky, Sky+ and Sky Guide are trademarks owned by and used under licence from British Sky Broadcasting Group Plc.

Infomation correct at time of going to print (August 2006)

USING YOUR SKY+ REMOTE CONTROL

This remote control is compatible with your Sky+ box and with most TV sets. All you have to do is set up the remote control to work with your particular equipment. Please read this leaflet carefully to make sure the setup is done properly, then keep it in a safe place in case you need it in the future.

4052_SKY+ LEAFLET 3/8/06 3:12 pm Page 2

A FIRST THINGS FIRST

There are two AA batteries included in the pack. Before you can do anything you need to put the batteries in the remote control, as follows:

1 Follow the diagrams below to remove the battery cover.

2 Insert the batteries, matching the + and - signs.

3 Once the batteries are in, put the cover back on, making sure the catch clicks into place.

When you're using the remote control, make sure:

- you point it straight at the Sky+ box (or TV);
- there's nothing blocking the infrared receiver on the Sky+ box (or TV).

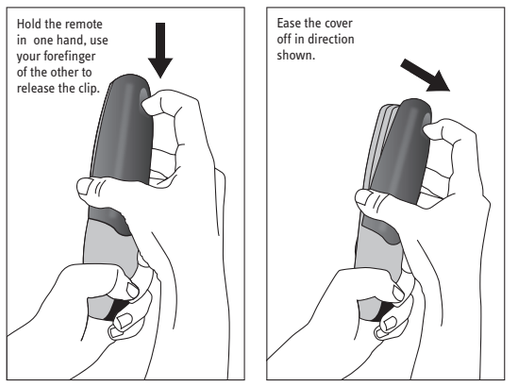

B SETTING UP THE REMOTE CONTROL TO WORK WITH YOUR TV

1 Turn on your TV and Sky+ box.
2 Find your TV's brand in the list opposite.
3 Press tv on your remote control.
4 Hold down select and the red key together for about two seconds until the light on the remote control flashes twice.
5 Press tv again.
6 Key in the 4-digit code of your TV brand. The light on the remote control flashes twice. If you see it flash only once, check you've got the right code and enter it again.
7 Press the standby key on your remote control. If the TV switches off, press select. The light on the remote control flashes twice. If the TV doesn't switch off, press tv then standby. Keep doing this (press tv then standby) until the TV turns off, then press select. The settings are made and your remote control should now work with your TV.
8 If you can't find your brand, refer to your Sky Guide by selecting > *interactive* > *Sky Customer Service* > *Equipment help* > *How do I programme my Sky remote to operate my TV* and follow the onscreen instructions. Write the number here for future reference: ____

C TV SETUP CODES

Aiwa	0406	Metz	0491
Akai	0098	Minoka	0921
Akura	0042	Mitsubishi	0150
Alba	0043	NEC	0170
Amstrad	0063	NEI	0514
Baird	0117	Nikkai	0528
Bang & Olufsen	0118	Nokia	0536
Beko	0125	Nordmende	0537
Beon	0899	Orion	0549
BPL	0115	Panasonic	0051
Brionvega	0147	Philips	0081
Bush	0157	Pioneer	0166
Crown	0225	Proline	0592
Daewoo	0092	Protech	0595
Decca	0244	Pye	0600
Dual	0257	Relisys	2214
Epson	2108	Roadstar	0625
Ferguson	0293	Saba	0645
Fidelity	0294	Saisho	0649
Finlandia	0296	Salora	0651
Finlux	0297	Samsung	0060
Fisher	0154	Sanyo	0159
Fujitsu	0313	Schneider	0665
Funai	0179	Seleco	0672
Genexxa	0330	Sharp	0093
Goldstar	0056	Siemens	0680
Goodmans	0335	Sony	0000
Granada	0340	Soundwave	0702
Grundig	0345	Tandy	0741
Harwood	0361	Tatung	0049
Hinari	0365	Technics	0250
Hitachi	0145	Techwood	0750
Hyundai	1206	Telefunken	0757
InFocus	0995	Thomson	0771
ITT	0384	Thorn	0772
JVC	0053	Thorn-Ferguson	0936
Loewe	0442	Toshiba	0156
Matsui	0477	Wharfedale	1535
Memorex	0037		

To go back to the factory settings, press tv then hold down select and the red key together for about two seconds until the red light on the remote control flashes twice. Then key in the sequence 9-8-1.

706047_Sky_111_Ofa:Sky_Remote_Eye_Instruct_702870 03-04-2007 14:09 Pagina 1

YOUR SKY REMOTE CONTROL

TV
To control the functions of your TV

Box Office
To access the Box Office programs

TV Guide
To preview the complete TV listings

Mute
To turn the sound on your TV on/off

Arrows
To view the TV listing on other channels, while staying on the current channel. To highlight the option you require.

Text
Puts you into the text mode

Back up
To return to the previous page

Colours
To select a variety of onscreen options

Play/Pause
Plays recorded programs or pauses live TV

Rewind
Rewinds recorded programs or live TV

R
Records programs

Sky
Press to control your Sky/HD box

Power
To turn your Sky/HD box or TV on/off

Services
To activate special features for example: Parental controls, Subtitles and Favorites

Interactive
Press for a selection of interactive services also gives access to information about the program you're watching or a highlighted program

Ch + and –
To change the channels

Select
To select or confirm the option you want

Help
To activate the subtitles or audio description. Also to get help on using the Sky Guide

Fast Forward
To fast forward recorded program

Stop
To stop the program playing

Numbers
To select channel numbers or menu options

Important information about the batteries

If the batteries require replacing a message will appear on the Sky Guide, when this message appears you should replace the batteries straight away this will ensure that no information is lost.

- If you do not replace the batteries within 10 minutes all of the settings that you have programmed into the remote control for the TV are lost. If this occurs you will need to refer to the section 'How to setup your remote to control your TV' and reinstall the TV.
- Never leave old batteries inside your remote
- When replacing batteries always replace both batteries never mix batteries (old & new or different brands of batteries)
- Remember when disposing of old batteries always dispose of them at recycle points.

Tips to increase the longevity of your remote control

- Do not let it fall
- Be careful around liquid products
- When cleaning the remote use a dry cloth

Should you require further assistance, please use the following:

- The user manual for the Sky+ box
- The website www.sky.com
- Via the 'interactive', '*Sky Customer Service*', '*equipment help on your remote control*'.

Alternatively contact the technical helpline, you will find the details to do this press '*Services*', '*Telephone Numbers*', '*Technical Help*'.

UNIVERSAL ELECTRONICS / ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one (1) year warranty period. The forwarding costs are on the account of the owner; the costs of returning the product are on the account of UNIVERSAL ELECTRONICS / ONE FOR ALL. This warranty does not cover damage or failures caused by products or services not supplied by UNIVERSAL ELECTRONICS / ONE FOR ALL, or which result from not mounting the product according to manual instructions. This also applies when the product has been modified / repaired by others than UNIVERSAL ELECTRONICS / ONE FOR ALL or if a fault is the result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, improper maintenance, alteration, modifications, fire, water, lightning, natural disasters, wrong use or carelessness. To obtain warranty service during the warranty period, please notice that we need your original purchase receipt so that we may establish your eligibility for service.

If you have bought this product for purposes, which are not related to your trade, business or profession, please remind that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

706047

SKY 111

RDN-1030407

ONE FOR ALL®

Using the Sky+ remote control

This is the original remote control for your Sky+ box, it can also be used for many different brands of TV's. If you would like to control your TV please follow the instructions mentioned in this user guide. It is always advisable to keep this user guide in a safe place for future use

706047_Sky_111_Ofa:Sky_Remote_Eye_Instruct_702870 03-04-2007 14:09 Pagina 2

To begin with

Please find included in the packaging two AA batteries, insert these into the remote control following the guide below:

1 Remove the battery cover as shown below

2 Correctly insert the batteries

3 After inserting the batteries, replace the battery cover correctly (you should feel it click into place)

Make sure that there is nothing obstructing the infrared receiver on the Sky+ box or TV when you are using the remote control.
Always point the remote directly at the Sky+ box or TV.

How to set up your remote to control your TV.

1 Ensure the TV and Sky+ box are on with a picture

2 Check on the list opposite for the brand of your TV.

3 Press **TV**

4 Press **RED** and **Select** together until the remote blinks twice.

5 Press **TV** again

6 Enter the **4-digit code** (chosen from the list on the page opposite for your brand) the remote should blink two times, if it only blinks once check the code and enter it again.

7 Aim the remote at the TV and press Power, if the TV turns off, press Select and the remote blinks twice and stores the code. If the TV does not turn off, keep alternating between TV and Power until the TV turns off, once the TV turns off press the Select key to store the code. The remote control should now work with you TV.

8 Should you be unable to locate your brand check in the Sky Guide under the '*Interactive*', '*Sky Customer Services*', *Equipment Help*', '*How do I program my Sky remote to operate my TV*' use these instructions to install your TV.

For future reference, you can make a note of your code here: _ _ _ _

TV SETUP CODES

Aiwa	0406	Metz	0491
Akai	0098	Minoka	0921
Akura	0042	Mitsubishi	0150
Alba	0043	NEC	0170
Amstrad	0063	NEI	0514
Baird	0117	Nikkai	0528
Bang & Olufsen	0118	Nokia	0536
Beko	0125	Nordmende	0537
Beon	0899	Orion	0549
BPL	0115	Panasonic	0051
Brionvega	0147	Philips	0081
Bush	0157	Pioneer	0166
Crown	0225	Proline	0592
Daewoo	0092	Protech	0595
Decca	0244	Pye	0600
Dual	0257	Relisys	2214
Epson	2108	Roadstar	0625
Ferguson	0293	Saba	0645
Fidelity	0294	Saisho	0649
Finlandia	0296	Salora	0651
Finlux	0297	Samsung	0060
Fisher	0154	Sanyo	0159
Fujitsu	0313	Schneider	0665
Funai	0179	Seleco	0672
Genexxa	0330	Sharp	0093
Goldstar	0056	Siemens	0680
Goodmans	0335	Sony	0000
Granada	0340	Soundwave	0702
Grundig	0345	Tandy	0741
Harwood	0361	Tatung	0049
Hinari	0365	Technics	0250
Hitachi	0145	Techwood	0750
Hyundai	1206	Telefunken	0757
InFocus	0995	Thomson	0771
ITT	0384	Thorn	0772
JVC	0053	Thorn-Ferguson	0936
Loewe	0442	Toshiba	0156
Matsui	0477	Wharfedale	1535
Memorex	0037		